





Visite la página TRAXXAS.com/manuals para descargar el instructiones en su idioma.

Auf TRAXXAS.com/manuals können Sie anleitung in Ihrer Sprache downloaden.

Front and Rear Locking Differentials Installation Instructions

Covers Parts #8195

Kit contents:

- Differential assembly (2)
- Differential locking fork (2)
- T-Lock servos/servo mount assembly
- T-Lock cable (long)
- T-Lock cable (short)
- Ball cup (2)
- E-clips (2)
- 2.6x8mm BCS (2)
- 3x8mm BCS (2)
- · High performance grease

Tools required:

- · 2.0mm hex wrench
- · Needle nose pliers

Installation

- Remove the battery tray, all four wheels and tires, and the front and rear axle assemblies from the chassis.
- 2. Remove the portals from both ends of the front and rear inner axles.
- 3. Remove the differential covers and spools. **Retain** and reuse the bearings from the spools.
- Remove the T-Lock cable plugs from the front and rear inner axle housings by removing the E-clips.
- 5. Install the bearings (**from step 3**) onto the differential assembly.
- 6. Place the differential assembly into the front axle housing (A). Apply a drop of the included high performance grease to the ring gear.
- 7. Assemble the locking fork to the short T-Lock cable (B).
- 8. Install the cable into the front axle housing and snap the locking fork onto the locking slider (C).
- 9. Secure the cable in the housing with an E-clip (D).
- Repeat for the rear axle using the long T-Lock cable.
- Route the T-Lock servo wires through the T-Lock servo mount as shown (E), then install the servos/ servo mount assembly onto the chassis using the included 3x8mm BCS (2) (F).
- 12. Remove the receiver box cover. Route the servo wires through the wire clamp area of the receiver box and plug the wires into the receiver (front T-Lock servo to channel 4; rear T-Lock servo to channel 5). Bundle the wires into the receiver box (G). Reinstall the cover.
- 13. Screw a ball cup onto the front and rear T-Lock cables until all of the threads are hidden (H).
- 14. Snap the ball cups onto the T-Lock servo horns (I).
- 15. Install the T-Lock cables into the servo mount and secure with the 2.6x8mm BCS (2) (J).
- 16. Reinstall all removed parts, routing the T-Lock cables over the suspension link rods.



















