




## Body Foam Spacers Installation Instructions


Covers Parts #9226

### Kit contents:

- Body cage
- Front adhesive foam body spacers (2)
- Rear adhesive foam body spacers (2)

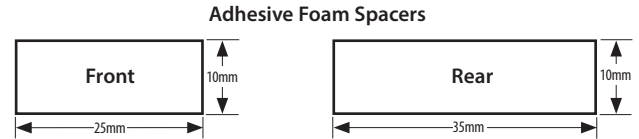

Prior to installation on the vehicle body, peel the backing from the front and rear adhesive foam body spacers and attach them to the flat surfaces on the body cage as shown.

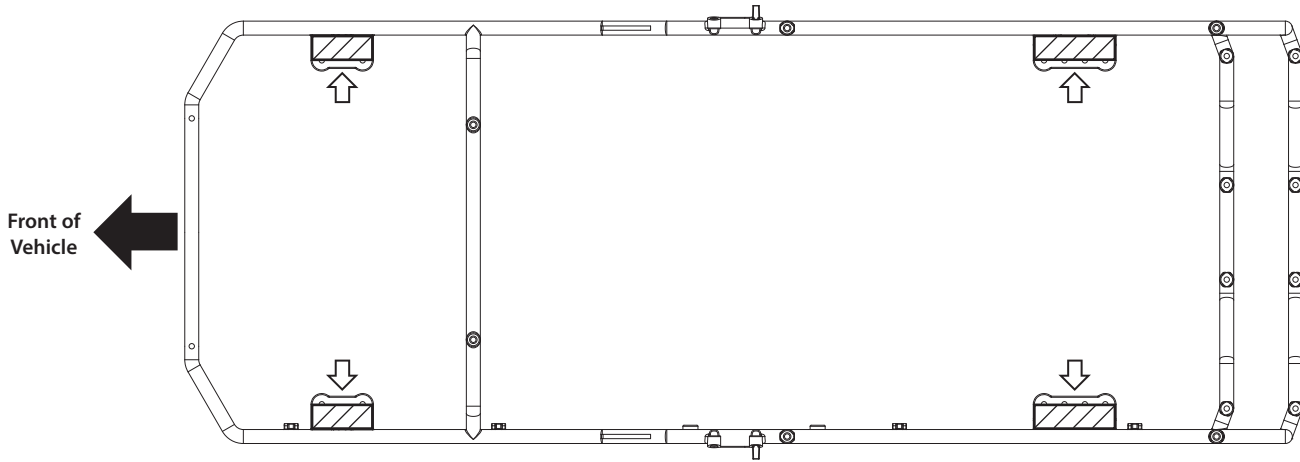


## Body Cage Trimming Instructions (for installation on #8130 series accessory bodies ONLY)

### Tools needed:

- Side cutters

**CAUTION: RISK OF INJURY!** Use care with hobby knives, tapered reamers, and other cutting tools as they are extremely sharp and can cause severe injury, deep cuts, and/or punctures.

Use side cutters to remove the small rear section of the body cage as indicated.

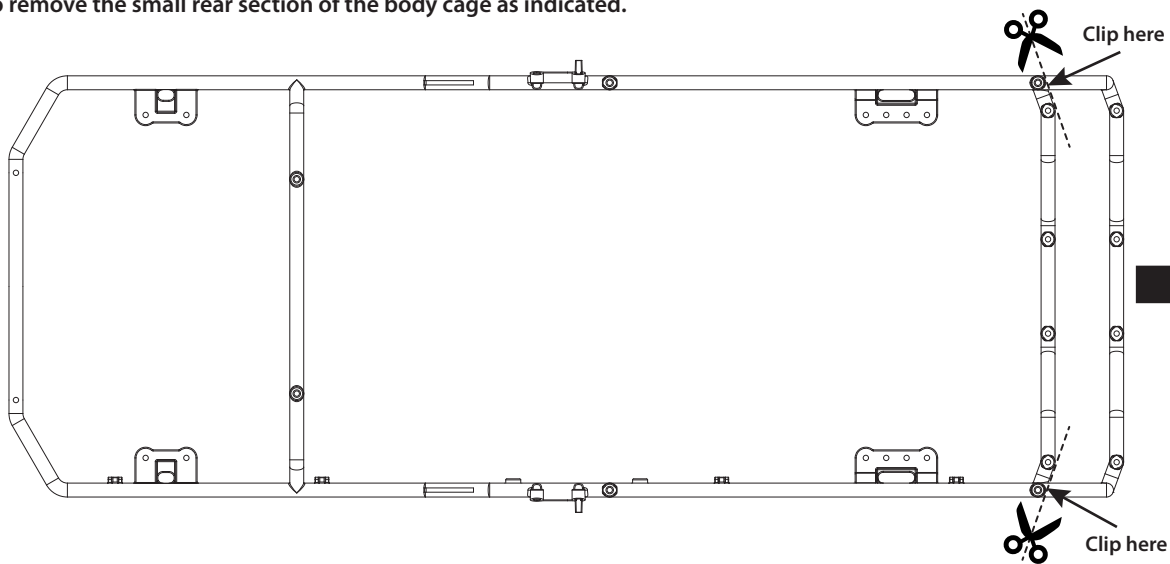

If you have questions or need technical assistance, call Traxxas at

# 1-888-TRAXXAS

(1-888-872-9927) (U.S. residents only)

TRAXXAS.COM

Traxxas, 6250 Traxxas Way, McKinney, TX 75070, Phone: 972-549-3000, Fax: 972-549-3011, e-mail: support@Traxxas.com